

F7 FOLDING DRONE

— ULTRAPORTABLE AND FOLDABLE —

In order to make sure that it meets the requirement of the electromagnetic environment of the aviation radio station, flying within the scope of 10 kilometers on each side by taking the airport runway center line as the middle line is **HIGHLY FORBIDDEN** or flying within the scope of 20 kilometers by taking both ends of the runway as the center is **HIGHLY FORBIDDEN**. Flying on the route of the airline is also **PROHIBITED**. Stop using all kinds of flying models or unmanned Quad-rotors in the AREA that prohibited by related authority or department of our country.

CONTENTS

PREFACE	1-2
WARNING	3-4
FLY SAFETY	5
TRANSMITTER FUNCTIONS	6
AIRCRAFT DIAGRAM	7
1.ASSEMBLE THE PROPELLER	7
2.INTELLIGENT FLIGHT BATTERY	8
3.CHARGING THE BATTERY	8
4. LITHIUM BATTERY CHARGING INSTRUCTIONS	8
REMOTE CONTROL OPERATING METHOD	9
FLIGHT	9-11
COMPASS CALIBRATION	10
WAY POINT FLIGHT	12
POINT OF INTEREST	12
PRODUCT FUNCTIONS PROFILE	13
1. EMERGENCY STOP	13
2.GPS FOLLOW ME	13
3. IMAGE RECOGNITION FOLLOW ME/GESTURE CONTROL	14
4. HAND GESTURE	14
5.RETURN TO HOME	14
6.TRIM UNDER NO GPS MODE	15
DOWNLOAD THE "SJ GPS PRO" APP	15
APP FUNCTIONS	15-18
CAMERA FUNCTIONS	19
SAVE THE PHOTO AND VIDEO TO THE MOBILE APP ALBUM	19
SPECIFICATIONS	20-21
PARTS LIST	22
COMMON PROBLEMS AND SOLUTIONS	22

PREFACE

Thank you for purchasing the SJ-Series GPS aircraft. Please read all instructions and warnings carefully before operating. Please also keep this instruction manual for future reference and maintenance.

IMPORTANT:

1. This product should be operated by the people who are over 14 years old. It is a precision device; integrating machinery and electronics with air mechanics and high frequency transmission. It requires correct assembly and debugging to avoid any accident. The user should operate and control this product in a safe manner. In case of incorrect operation, it may cause serious injury or damage property. It can also be lost due to incorrect operation.
2. This product is suitable for experienced UAV pilots no less than 14 years of age.
3. In the event of a problem during using, operating, or maintenance, please contact the local sales agent or retailer or keep in touch with the responsible staff of our company.

SAFETY PRECAUTIONS:

This R/C aircraft can be dangerous when in use, please make sure you keep it far away from any persons or spectators when flying. In-correct installation, poor conditions, or users not familiar with operation may cause damage to the aircraft or injure people or may cause an unexpected accident. Please pay close attention to flying safety and learn to recognize more dangerous conditions which may cause an accident due to your own negligence.

1. Keep it far away from any structures or crowds.

This R/C aircraft may vary slightly in speed or sensitivity while flying and can cause potential danger. Therefore, please keep it far away from crowds, buildings, trees, structures, high-voltage wire, etc. Please also avoid flying in adverse weather conditions such as rain, electrical storms, and high winds to ensure safety of the user, any spectators, and surrounding property.

2. Keep it away from any moist environment.

The inside of the aircraft is composed of many precision electronic and mechanical parts. Therefore, please try to avoid any moisture or water content from entering the main body of the aircraft as it may cause a breakdown of the mechanical and electronic parts and thus cause an accident.

3. Only operate with included parts for intended use.

Please use the original parts made by SJ-Series for any re-equipping or maintenance to ensure flying safety. Please operate and use only under the scope of the product function permitted. Using un-approved parts will void warranty.

DO NOT use for any illegal purpose or use beyond the scope of which your local laws and regulations have stipulated.

4. Avoid controlling it independently.

New users may have certain difficulties during the early stages of learning to operate this aircraft. Please try to avoid operating the aircraft alone.

When available, always operate this aircraft under the guidance of a more experienced user.

5. Do not operate under the influence of drugs or alcohol.

Please operate this R/C aircraft according to your own state and flying skill. Any fatigue, bad mental state, or incorrect operation may increase the probability of accidental risk.

6. Please keep a safe range from aircraft when using top speed.

When the operator is flying in high speed, please keep the aircraft far from the pilot and any surrounding persons or objects so as not to cause danger or damage.

7. Store it in a cool, dry place.

The R/C aircraft is composed of material such as metal, fiber, plastic, electronics, etc. Therefore, please keep it away from any heat source and avoid prolonged exposure to direct sunlight. Excessive heat exposure can cause distortion and damage.

- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
- However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Please note that changes or modifications not expressly approved by the party responsible for compliance could void the use's authority to operate the equipment.

WARNING

1. There is important information contained in this package and instruction manual, please keep it for future reference.
2. You have the responsibility to make sure that this model of aircraft won't cause injury to others' body or cause any damage to property.
3. Please operate strictly as shown on the instruction manual when debugging or assembling this aircraft. During the process of flying or landing, please pay more attention to keep 1-2 meters between the user and the aircraft to avoid colliding to the head or face or body, which may cause injury.
4. Our company and distributors won't be responsible for any incorrect operation, which may cause loss or damage or injury to the body.
5. Children ages 14 and up should use this product under the guidance of an adult. This product is FORBIDDEN to be used by children under 14 years old.
6. Please correctly assemble and use this product as shown on the instruction manual or packing instruction. Some parts should be assembled by an adult.
7. Small parts are included with this product. Please place it beyond the reach of the children to avoid a CHOKING HAZARD or parts being mistakenly swallowed.
8. Playing on the road or near high traffic areas is strictly FORBIDDEN so as not to cause an accident.
9. Please dispose of the packing material timely so as not to cause injury to children.
10. Please DO NOT disassemble or re-equip the aircraft as it may cause a breakdown of the aircraft during flying.
11. Batteries in the battery compartment of the charger should be inserted into the designated power source which has the same logo as the product.
12. Built-in rechargeable 3.7V lithium polymer battery included in the transmitter.
13. Only the original charger made from our factory can be used.
14. Charger is not a toy.
15. When charging the battery, please conduct it under the surveillance of an adult. Please also keep it far away from any combustible object when charging. Please keep this aircraft within eyesight when charging.
16. Please DO NOT make it short-circuited or squeeze the battery so as not to cause an explosion.
17. DO NOT mix the Li-ion battery with a different type of battery.
18. Intelligent lithium battery is loaded in the Quad-rotor. Both built-in or external can be used for charging.
19. Please DO NOT make the battery short-circuited or decompose the battery or throw the battery into the fire; DO NOT place the batteries near the high temperature or heated area (such as near the fire or near the electric heating device).

20. The aircraft should be kept far away from any other electric compliance or equipment as far as possible or kept far away from the place where having the magnetic object nearby as they may cause interference with each other.
21. Please keep the safe distance from the high-speed rotating rotor so as not to cause twisted or danger of being wounded or being cut.
22. Engine will heat up. Please DO NOT touch it to avoid being burned or injured.
23. Please DO NOT close this product to your ear as it may cause injury to your hearing.
24. Type-C 5V wall charger recommended for charging. DO NOT use any charger stronger than 5V.
25. To comply with the command of the magnetic environment requirement formulated by the Aviation Radio Bureau and the related authority, during the regulated period in certain areas, please stop using the transmitter of this model when such regulation command is issued.
26. Keep your UAS within sight.
27. Never fly over groups of people.
28. Never fly over stadiums or sports events.
29. Understand airspace restrictions and requirements.



WARNING: Product should only be used by adults and children 14 years and older. Adult supervision required for children under 14 years of age.

WARNING: CHARGING OF THE AIRCRAFT BATTERY MUST BE SUPERVISED AT ALL TIMES BY AN ADULT. UNPLUG THE BATTERY WHEN FULLY CHARGED. DO NOT OVER-CHARGE THE BATTERY.

FLY SAFETY

WiFi transmission area requirements:

1. Make sure correctly open the remote control antenna.
2. Make sure fly in the open area without any interference and obstacle.
3. Do not fly against the wind; WiFi transmission distance is 3KM.



+



+



+



Fly in Open Areas

Strong GPS Signal

Maintain Line of Sight

Maximum flight altitude height is about 120 meters.



Avoid flying over or near obstacles, crowds, high voltage power lines, trees, airport or bodies of water.

DO NOT fly near strong electromagnetic sources such as power lines and base stations as it may affect the onboard compass.



DO NOT use the drone in adverse weather conditions such as rain, snow, fog and wind speeds exceeding 7 m/s or 16 mph.



 
No Fly Zone

Stay away from the rotating propellers and motors.




It's important to understand basic flight guidelines, for the safety of both you and those around you. Don't forget to read the Safety Guidelines before flight.


TRANSMITTER FUNCTIONS

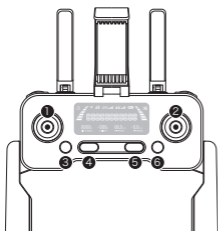

 
1. Throttle stick
2. Direction stick
3. Click once speed switch; Keep pressing for 5 seconds switch to normal mode, GPS mode
4. Click once then keep pressing for 3 seconds to emergency stop
5. Click once power on; Click once then keep pressing for 3 seconds power off
6. Click once to RTH mode





 7. Zoom in and out
8. Gimbal Dial: Controls the camera's tilt
9. Shooting
10. Recording

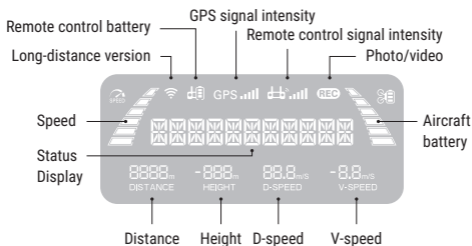

Tip: When the transmitter is in low power,  keeps flashing, now you need to charge the transmitter.

  
AIRCRAFT DIAGRAM

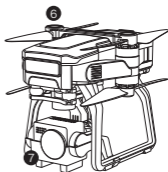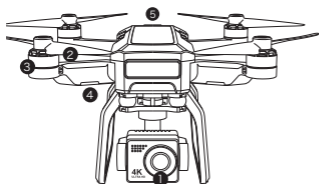


- 1. 3 Axis mechanical gimbal
- 2. Propeller
- 3. Motors
- 4. LED light
- 5. Intelligent battery
- 6. Fixed parts for propellers
- 7. Gimbal protection cover

1. ASSEMBLE THE PROPELLER

 Please note that the letter "A" or "B" is printed on each propeller, and make sure all the propellers are attached in the correct motor position.

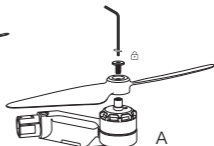


 Propeller "A" replacement: Take out the propeller "A" with the screw wrench in clockwise direction; then install the new Propeller "A" with screw wrench in counterclockwise direction and fix the propeller.

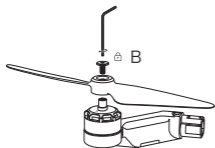

Propeller "B" replacement: Take out the propeller "B" with the screw wrench in counterclockwise direction; then install the new Propeller "B" with screw wrench in clockwise direction and fix the propeller.

 2. INTELLIGENT FLIGHT BATTERY





1. Battery switch
2. Battery power indicator
3. Type-C charging port

High — Electricity — Low



- Hold the switch button for 3 sec. power on; then press the button for 3 sec. power off.
- When the battery in low voltage, Blue indicators will be blinking, now please charge the battery.

  3. CHARGE THE BATTERY

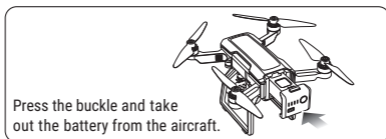

Phone adapter: 5V=3A
(Not included)



Charging time: About 5.5 hours
(Depending on Charging adapter)



Remote control charging method

4. LITHIUM BATTERY CHARGING INSTRUCTIONS

1. Either power on or power off, the aircraft can be charged. Connect the Type-C charger to an DC power supply(4.5V-5.5V,2A-3A), and then connect with the charging port of the aircraft, when in charging, the indicator on the aircraft will become Blue blinking; All indicators keep solid on means charging completed.
2. Aircraft can be charged by the mobile power or car-loaded power.
3. Charging time takes about 5.5 hours; operating time takes about 26min.
4. Remote control is built-in 3.7V 1500mAh lithium polymer battery, fully charge takes about 2 hours.

(When in charging, the indicator on the transmitter become Red; when fully charged, the indicator on the transmitter will turn to solid Green).

REMOTE CONTROL OPERATING METHOD

Throttle Joystick



Direction Joystick



FLIGHT



Ensure the remote control antennas opened correctly before operation. It takes about 40 seconds for the aircraft to connect to the remote control.

Step 1: Power on the remote control

(Pairing takes 40 seconds if the system started)

- Power on the remote control (Check the current electric capacity first then power on the remote control), "CONNECTING_" appeared on the remote control LCD screen. "DI DI DI" sounds indicates the remote control is under pairing.



STEP 2: Power on the aircraft, then put it on the level surface

- Power on the aircraft, "DE DE DE" sounds from the aircraft, now all the LED lights keep blinking, then all LED lights turn to Red with slowly flashing.
- Put it on the level surface, the aircraft pairing automatically, all the lights in RED keep slowly flashing.

STEP 3: Remote control and Aircraft pairing frequency successfully.

- Remote control makes a "DI" sound, then "GPS MODE" appears on the LCD screen, now the green (back) + white lights (front) slow-alternate flashing.

 
NOTE: Now you can connect the WIFI signal according to the APP instruction or waiting for the GPS calibration completed.

Step 4: Connect APP



- Connect your smart phone to the WIFI of aircraft and check the aircraft's status on the "SJ-F-PRO *** -BRG" APP.

Step 5: Compass Calibration



1. Compass Calibration Part 1

- Push the joysticks into the 1 & 11 o'clock position.
- Green lights (Back) + White/Red lights (Front) keep blinking.
- App aircraft status: "Compass calibration".

Remark: The compass will be calibrated automatically when the magnetic interference occur, it is not necessary to calibrate the compass by manually.



2. Compass Calibration Part 2

- Keeping the aircraft level, pick up the aircraft from the back and rotate your body in one full circle (360°), Remote control make a "DI" sound.
- All lights turn to solid green.



3. Compass Calibration Part 3

- From the bottom, hold the aircraft vertically and camera is facing to the ground, rotating your body in one full circle (360°). Remote control make a "DI" sound.
- White/Red lights(Front) will turn to slowly flashing.
- App aircraft status: "Compass calibration okay".

Step 6: Reset to factory Setting/Calibrate Gyroscope



- Push the joysticks into the 11 & 1 o'clock position.
- Lights rapid-blinking blue (back) and white (front).
- App Drone Status: "Gyroscope is being calibrated" "Gyroscope okay".

NOTICE: Make sure the aircraft on a flat surface to calibrate gyroscope.

 
Step 7: GPS Searching (DO NOT use GPS Mode indoor)



- Set the aircraft back down to level surface.
- Lights return to slow-flashing green (back) + white (front) -- Means the aircraft is searching the GPS signal.
- This process can take a few minutes.
- App aircraft status: "Waiting for GPS signal".

NOTICE: Fly in open areas, tall structures and large metal structures may affect the accuracy of the onboard compass and GPS system. Please search the GPS signal in the open areas.

Starting/Stopping motors



- Push the joysticks into 5 & 7 o'clock position.
- Motors automatically to start, push the left joystick to take off the aircraft. (Starting the motors before the aircraft taking off).

NOTE: Starting the motors should be set before the aircraft take off.

– Stopping Motors:

1. Pushing the joysticks into 5 & 7 o'clock position again, motors stop working.
2. The motors will stop working if the motors starting are not operated after 20 seconds.

All LEDs on the front arms and rear arms, you are ready to fly!

- Blue (back) and white (front) lights are all solid (no blinking).
- App aircraft status: "Ready to fly".

Dual Remote Controller Mode



- Power off the remote control.
- Keep pressing the camera icon, clicking the power button twice, (click once indicating the electric quantity, click again. the remote control beeps three times indicating the right joystick change to the throttle stick, the LED appears "R HRMD MODE". Restart it and the left joystick change to the throttle stick.

 



Left Stick






Right Stick






NOTICE: The LED indicators on the front arms (white) and rear arms (green) keep slow-flashing if the GPS signal is weak; Keep pressing  for 5 seconds on the remote control to exit the GPS mode, green light (back) turn to blinking + white light (front) turn to solid.



 
WAY POINT FLIGHT

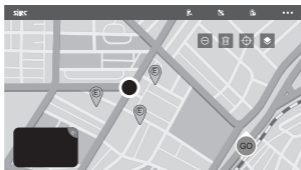- Ensure the mobile internet connected, enter  in the APP, catch the map data of the area when you intend to fly in your mobile device, then connect your mobile device with your aircraft, you can view the map from  in the APP.
- Successfully connect the aircraft WIFI with your smart phone, click  on the App, then you can find a RED CIRCLE(LIMITED FLIGHT RANGE)/TAKE-OFF POSITION/AIRCRAFT CURRENT POSITION on the map, mark the points (16 points at most) you plan to fly within the RED CIRCLE range on the map. If you would like to reset the points or flight route, click [Delete route](#) or [Delete all](#) . Click [Start](#) ,confirm to start Way Point Flight. Pushing the Right Joystick to cancel the Way Point Flight Function.



POINT OF INTEREST



1. Hovering the aircraft around the center point.
2. Choose  from the  in the APP.
3. Moving the right joystick to change surrounded speed, clockwise and counterclockwise flight.
4. Click  again in the APP to exit the POINT OF INTEREST flight.

PRODUCT FUNCTION PROFILE

1. EMERGENCY STOP





- !** Clicking once and keep pressing the **STOP** for 3 seconds to enter into Emergency Stop mode. It is activated if the flight height of aircraft within 6 meters; otherwise, it is not activated.

Only stop motors mid-flight in emergency when doing so can reduce the risk of damage or injury.

2. GPS FOLLOW-ME

When the Follow Me function activated, the aircraft will follow the GPS in your smart phone to follow you wherever you go.

(Make sure the smart phone connect with the aircraft successfully, turn on APP on your smart phone.)

1. Make sure the flight scope is within 10-50 meters.
2. Click  on the APP interface.
3. Waiting for APP aircraft Status to display "Follow Me ready" ---Now the aircraft is moving along with the positioning coordinate on the APP.
4. Click the  on the APP interface again to exit the Follow Me mode.



Common Issues:

GPS Follow-me function will be affected by the tall structures, trees and the living areas with WIFI signal interference.

GPS Follow-me function is not activated if the GPS signal weak or GPS positioning OFF in the mobile device.


* Use in open area and be mindful of your surroundings. Aircraft is NOT equipped with obstacle avoidance.

3. IMAGE RECOGNITION FOLLOW ME/GESTURE CONTROL

Click , choose , tap on the object or person you want to track, and tap to confirm your selection.

(NOTE: Make sure the size of the frame you mark is the same as the object or person you tap, the frame should not be too large.)

4. HAND GESTURE

Click  on the APP, count down 3 seconds to 0 seconds with the hand motion to take photos or record the video, please follow the tips from the (PIC.1).



5. RETURN-TO-HOME (RTH)

The Return to Home (RTH) function bring the aircraft back to the Take Off Point. This function only can be achieved under GPS mode.

There are 3 types of RTH: Smart RTH/Low-battery RTH/Fail connection RTH

①. Smart Return To Home



Press the Return to Home Button on your Transmitter or tap on the App of your smart phone, and the transmitter will start beeping. Your aircraft will return to the TAKE OFF Point. Press the button again to stop RTH procedure. or alter the left and right joysticks to make the aircraft landing in the safe area.



RTH Button



The app's RTH Button

②. Low-Battery return to home



Low-Battery RTH is triggered when the Flight Battery level is low, When low battery RTH activated, aircraft ascends or descends automatically at the height altitude of 30 meters, then you can alter the left and right joysticks to make it landing in the safe area. Aircraft returns to the take-off point if the current battery level can only support the aircraft long enough to descend from the current altitude.

③. Fail connection **RETURN-TO-HOME (RTH)**

Aircraft will enter Return to Home Mode if the signal to the transmitter is lost. The aircraft will return to the take-off point. The aircraft may link the remote control automatically during the RTH activated. If links successfully, you can re-operate the aircraft.

⚠ WARNING: This aircraft is **NOT** equipped with obstacle-avoidance. DO NOT power off the remote control in flight, or lose connection may caused so that RTH function will be activated.

6. TRIM UNDER NO GPS MODE

If the aircraft flies under NO GPS Mode, you can trim the aircraft to obtain more balanced flight. Keep pressing  beep once, and you will enter the trim mode. Push the direction joystick to the opposite side that the aircraft drifts to rebalance the aircraft. For example, if the aircraft drifts to the left, push the direction joystick to the right to make the aircraft balanced. Release the , exit the Trim Mode.

DOWNLOAD THE SJ GPS PRO APP



QR code of "SJ F PRO"
software for Apple IOS system
(Please scan this QR code to
install this software).



QR code of "SJ F PRO"
software for Android system
(Please scan this QR code to
install this software).

- Connect the power of this model, and then access into "SETTING" in the smart phone, open the "WIFI" and find the "SJ-F-PRO *** -BRG". When the link is successfully connected, please exit the "Setting" option.
- Open "SJ F PRO" software in the smart phone to access into the control interface.

APP FUNCTIONS

1. APP INTRODUCTION

Wait until the aircraft Status says "Ready to Fly" before initiating flight. This will ensure that your GPS is synced and your aircraft is ready to fly.



Back to Main Menu



Remote Battery



GPS Signal



Aircraft Battery



Setting



Auto Take-off

SD card status



Photo/Video Switching



GPS Return Home

Shutter



More Functions

Media Gallery
(One key to share)



Height (meters)



D N/A_m H N/A_m DS N/A_{m/s} VS N/A_{m/s}

Distance (meters)



Speed (meters/sec)



Sound
Recording



Image follow



GPS follow



Interest point



Music



VR



Lens angle



Ges photo



Ges record



Route rules



Filter



Zoom

2. APP ONE KEY SHARE FUNCTION



Pic. 1






Pic. 2



Pic. 3

 


1. Open the APP and click , enter into media library (Pic.1).
2. Click , enter into the share interface (Pic.2), choose one or all photos you like to share, click , choose the social media you like to share the photos (Pic.3).

Reminder: At most 9 photos can be shared one time.
But Only one video can be shared each time.

3. HOW TO SEARCH THE LOST DRONE

- ①. Continue to click **Find drone** > to open the MAP surface to search the aircraft.

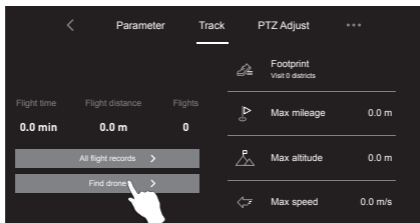

- ②. The last position of lost aircraft will be appeared on the MAP.



Current position of the mobile phone

4. FLIGHT

The Default GPS Mode is BEGINNER MODE:

1. Flight Distance is between 0-30 M.
2. Flight Altitude is between 0-30 M.
3. RTH Altitude is under 20 M.

 
You can Turn-off the BEGINNER MODE to set the parameters in the APP from the smart phone.




Flight System
Setting






CAMERA FUNCTIONS







 Take Photo

 Take Video

 
ICON ON APP

Click  on the remote control, or click  on the APP, the indicator  will flash once, means the camera takes one photo.

Click  on the remote control, or click  on the APP, the indicator  will keep flashing, means the camera is recording.

Press  again to save the video.

DO NOT take photo during recording.



SD CARD (Sold separated)



The Original images and videos are saved in the SD card. Press the SD card slightly to take it out, then insert the card into the card reader and insert into the Type-C outlet of a computer to read the data from SD card.


The images can be also viewed in the App.

SAVE THE PHOTO AND VIDEO TO THE MOBILE APP ALBUM





Pic. 1

Open the APP and connect the WIFI with the aircraft, click the , enter into the media library (Pic.1).

APP album: Choose photo and video and save them in the mobile album, click , photo and video are saved in the mobile album.



Pic. 2

SD card: Click , choose photo and video and save them in your mobile, click , photo and video are saved in the mobile album.



Pic. 3

NOTE: After shooting and recording finished, photo and video will be saved in the APP album and SD card, the resolution of photo and video saved in the APP album is different that in SD card.

SPECIFICATIONS

● Drone

MODEL: F7 4K PRO

Weight (Including Battery): 550g/19.4oz

Flight Time: Up to 23-25 min

Motor Model: 1806

Operating Temperature Range:

32° to 104° F (0° to 40° C)

Satellite Systems: GPS/GLONASS

Dimensions (LxWxH): Unfolded: 33X32.5X13.5(cm)

Folded: 11.8X16.1X13.5(cm)

● Gimbal Stabilization: 3-axis (Tilt,Roll,Pan)

Machanical Range: Tilt: -120° to +45°

Roll: -35° to +35°

Pan: -30° to +30°

Controllable Range: Adjustable remote control Angle: -90° to 0°

● Camera

Lens:FOV: 70°

Equivalent Focal Length: 60CM

Focus range: Fixed-focus

Resolution of photo: Phone 3840X2160P

SD card 3840X2160P

Resolution of video: Phone 1280X720P

SD card 3840X2160P


Photo Format: JPEG

Video Format: MP4

Supported SD Cards: Micro SD card (Class

10/U1 or later) 32G-128G

 Supported File Systems: FAT32

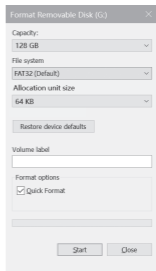

● 5G Transmission

Operating Frequency: 5.15-5.35 GHz; 5.725-5.825 GHz

Supported Transmission Protocol: 802.11a; 802.11n20; 802.11n40

Video Transmission Frame Rate: 15 FPS

● APP / Live View

Mobile App: SJ F PRO

CONFIGURATION	STORAGE METHOD		RESOLUTION	TRANSMISSION FRAME RATE
4K	Phone	Photo	3840X2160P	
		Video	1280X720P	15 fps
	SD card	Photo	3840X2160P	15 fps
		Video	3840X2160P	

Required Operating System:IOS 9.0 or later/Android 5.0 or later

● Transmitter

Operating Frequency: 2.4G + 5G bridge

Max operating distance: Up to 3KM (Outdoor and Unobstructed)

Battery: 1500mAh Li-polymer

Charging time: about 2 hours

Operating time: about 2 hours

Operating Voltage: 3.7V

Mobile Device Holder: 4.7" to 6.5" Smart Phones

Operating Temperature: 32° to 104° F (0° to 40° C)

● Intelligent Flight Battery

Capacity: 2600 mAh

Voltage: 11.1V

Battery Type: Li-polymer

Energy: 28.86Wh

Net Weight: 183 g / 6.5 oz

Max Charging Power: 15W

Max Charging Time: About 5.5 hours (Depending on Charging Power)


 
Charging Temperature Range: 32° to 104° F (0° to 40° C)

● Charging cable: Type-C

Voltage: 5V = 3A

Rated Power: ≤15 W

PARTS LIST (Included)

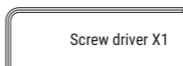

COMMON PROBLEMS AND SOLUTIONS

THE PROBLEM	REASON	COUNTERMEASURES
Drone lights flashing and no response from the drone when operating.	<ol style="list-style-type: none"> 1. Remote is not synced to the drone. 2. Insufficient battery power. 	<ol style="list-style-type: none"> 1. Refer to the Quick Start guide and re-sync the drone. 2. Recharge the battery.
The blades spin, but the drone cannot takeoff.	<ol style="list-style-type: none"> 1. Insufficient battery power. 2. The blades distorted. 	<ol style="list-style-type: none"> 1. Recharge the battery. 2. Replace the blades.
The quadcopter shakes heavily.	The blades distorted.	Replace the blades.
Drone cannot stay balanced in flight.	<ol style="list-style-type: none"> 1. The blades distorted. 2. The motor doesn't work properly. 	<ol style="list-style-type: none"> 1. Replace the blades. 2. Replace the motor.

